



■ 接続例

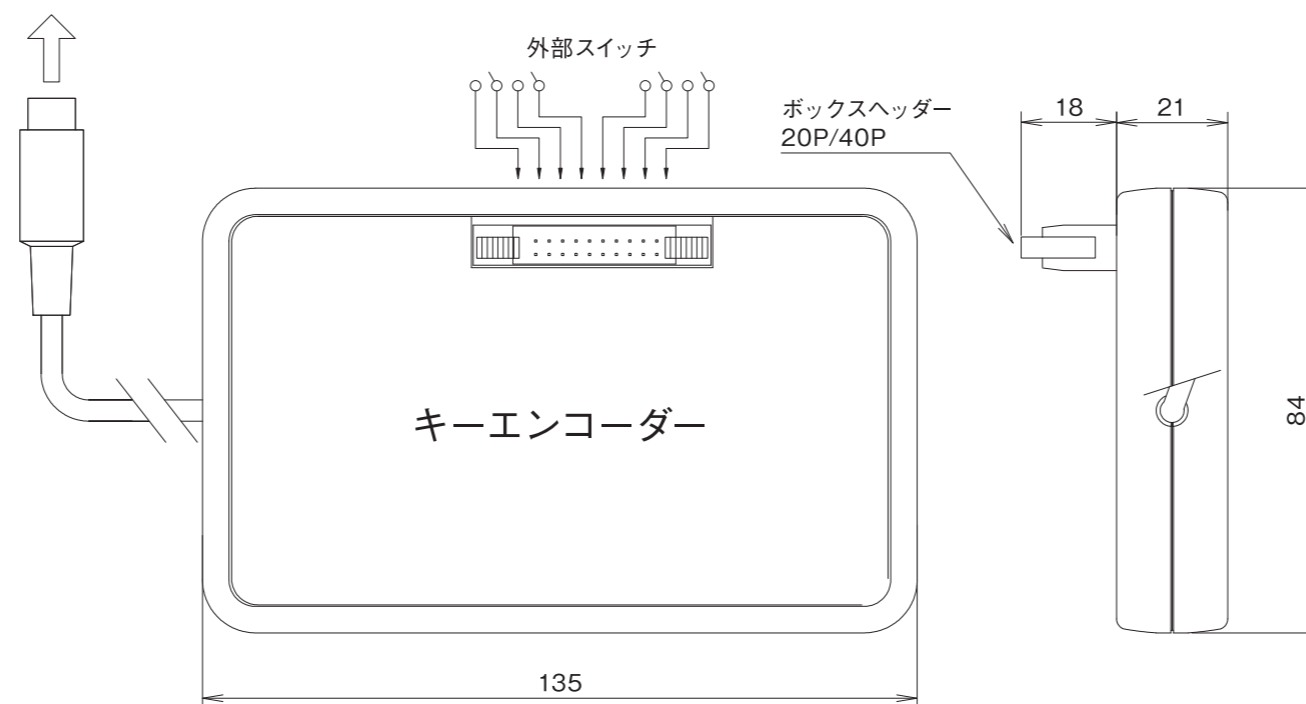

■ プリント基板タイプ

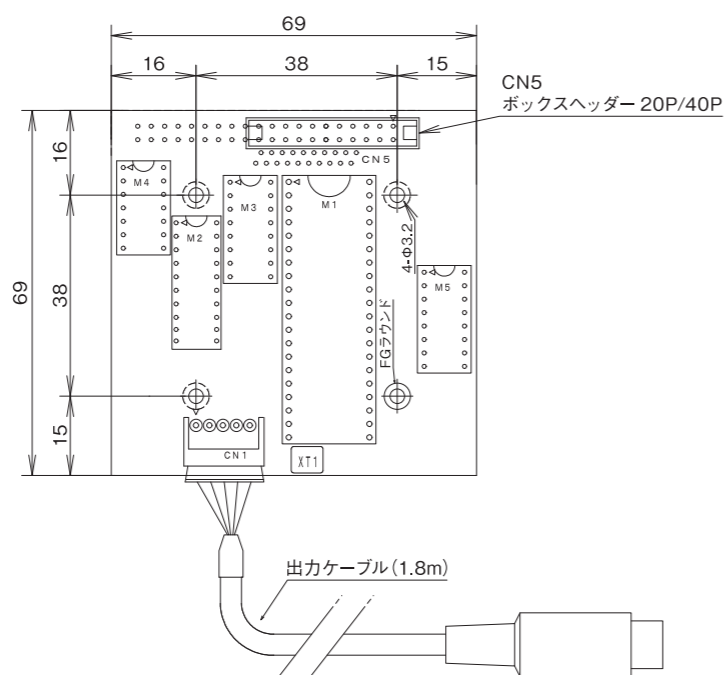

■ 標準E配列キーマトリクス

CN Pin No.	USB/PS/2			
	1	3	5	7
2	A	B	C	D
4	F9	F10	F11	F12
6	F5	F6	F7	F8
8	F1	F2	F3	F4
10	+	*	/	=
12	ESC	HOME	←	→
14	7	8	9	↑
16	4	5	6	↓
18	1	2	3	BS
20	0	.	-	↶

CN Pin No.	RS-232C/PC-98			
	1	3	5	7
2	C	D	E	F
4	F9	F10	A	B
6	F5	F6	F7	F8
8	F1	F2	F3	F4
10	+	*	/	=
12	ESC	HELP	←	→
14	7	8	9	↑
16	4	5	6	↓
18	1	2	3	BS
20	0	.	-	↶